


TriStar Control over MODBUS RS-232

Notes:

- 1) Set RS-232 speed to 9600
- 2) Relay C controls Tri-Star disable mode (set relay C to TriStar)
- 3) Both TriStar and World Data can be used simultaneously

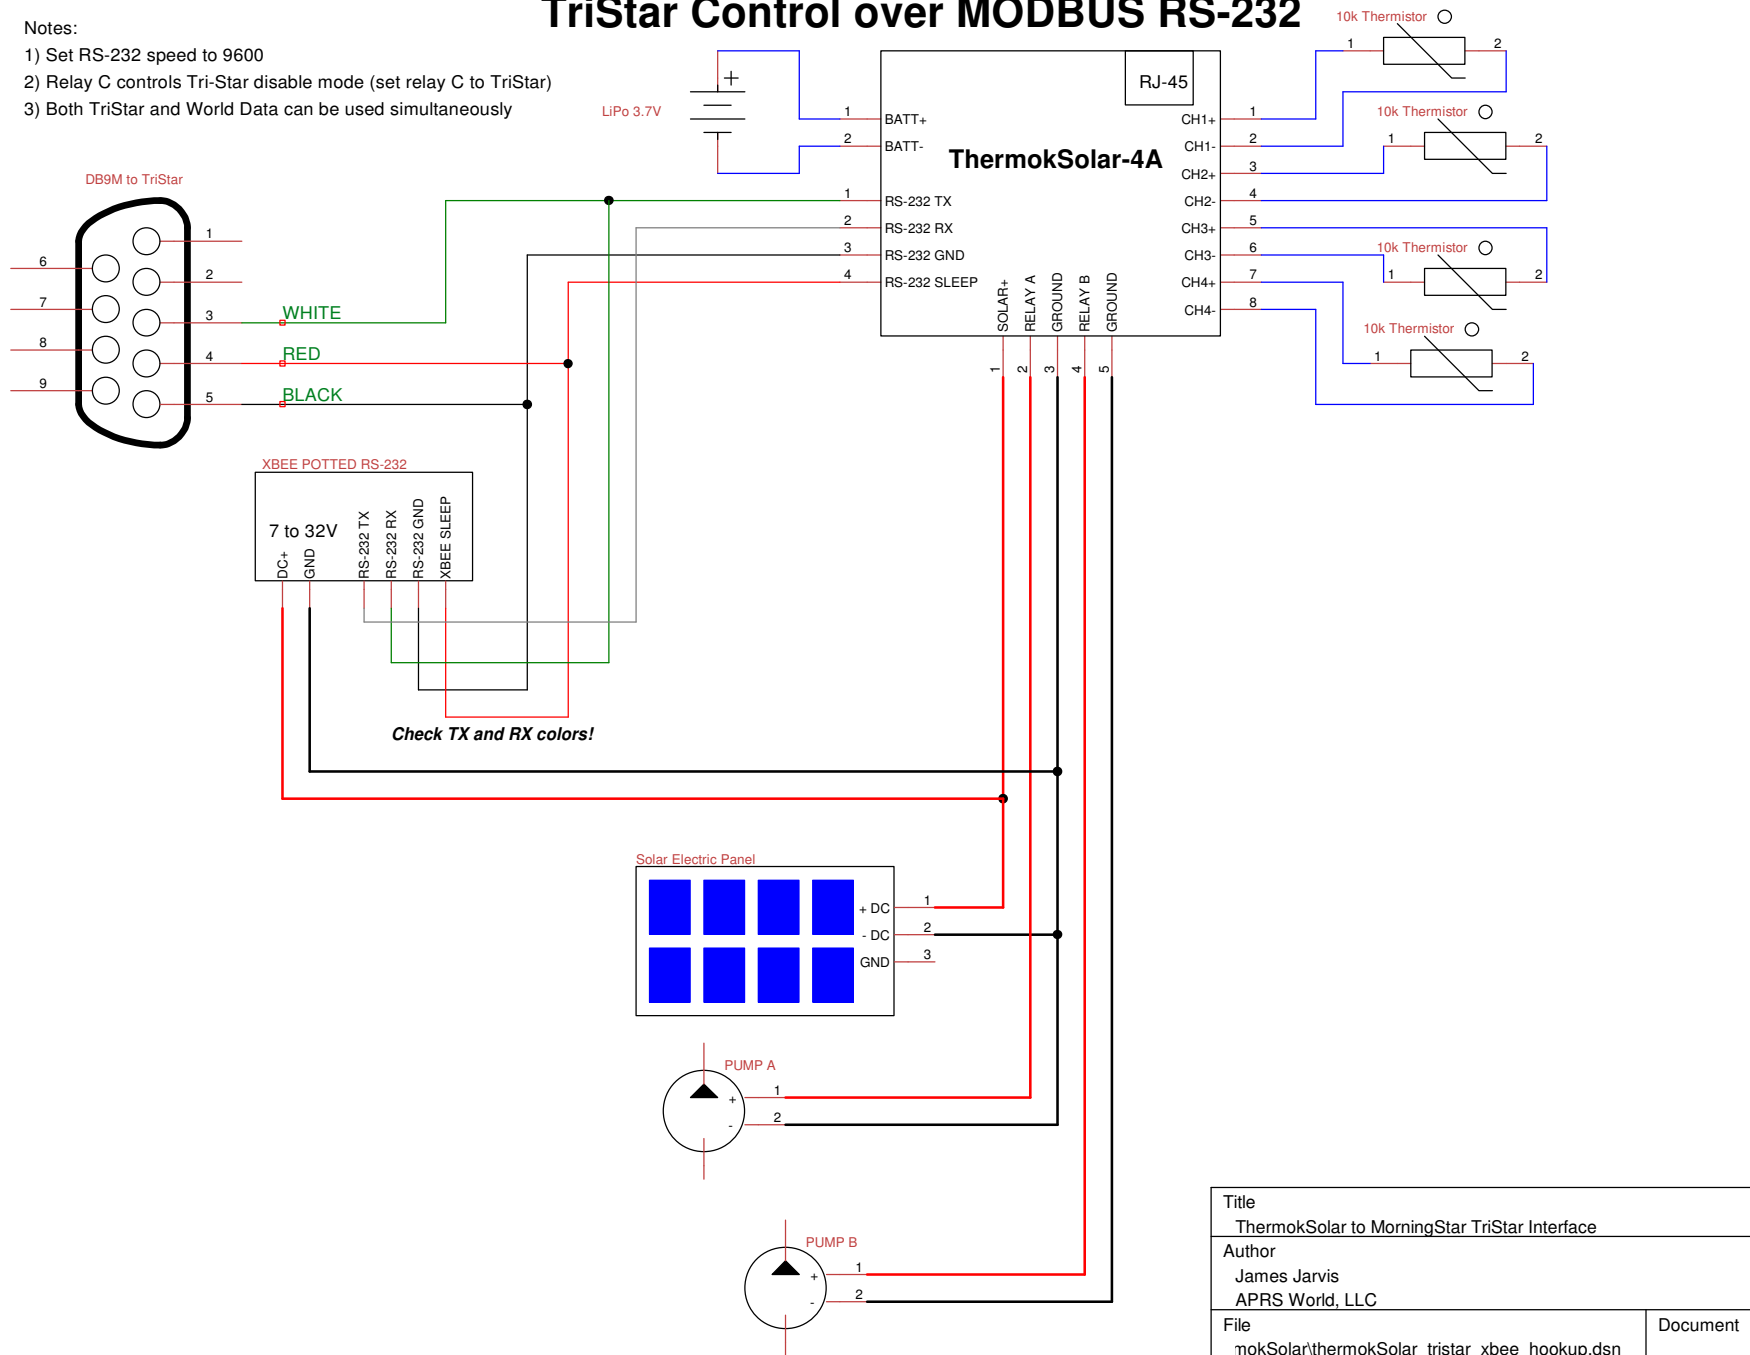

Title		
ThermokSolar to MorningStar TriStar Interface		
Author		
James Jarvis APRS World, LLC		
File	Document	
_mokSolar\thermokSolar_tristar_xbee_hookup.dsn		
Revision	Date	Sheets
1.0	2009-12-05	1 of 1