




QUICK COUPLER SPECIFICATIONS

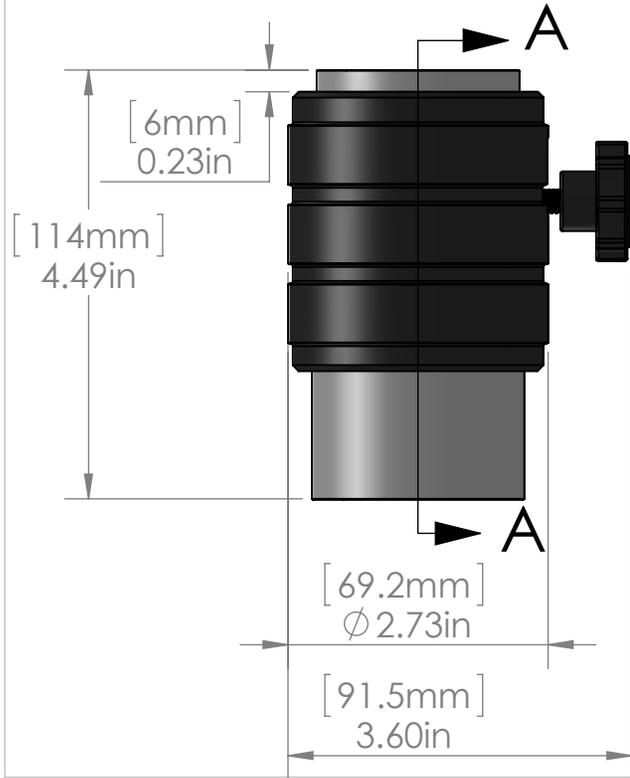


SECTION A-A SCALE 1 : 2

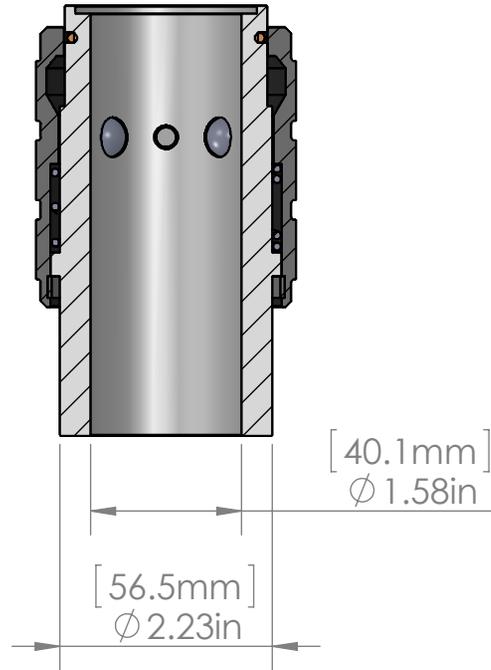


QUICK COUPLER OPERATION

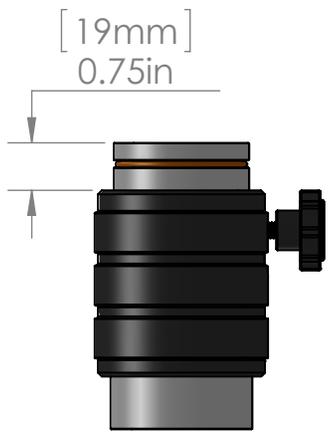

STEP 1: PULL RING DOWN

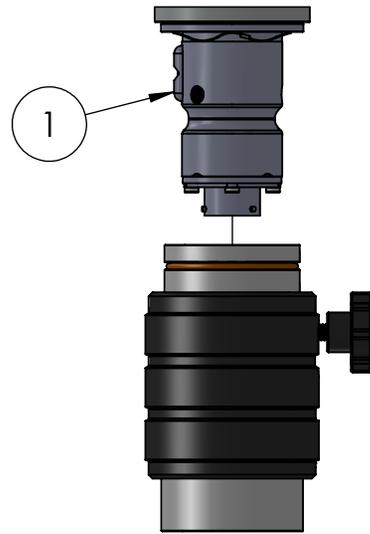

STEP 2: ALIGN SPINDLE KEY (1)
AND INSERT TURBINE

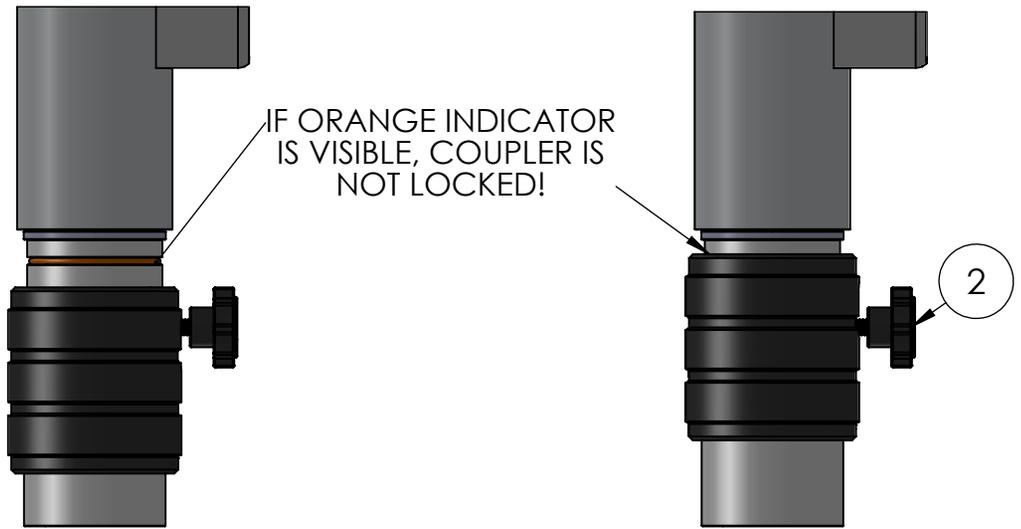

STEP 3: RELEASE RING AND
TIGHTEN LOCK KNOB (2)