
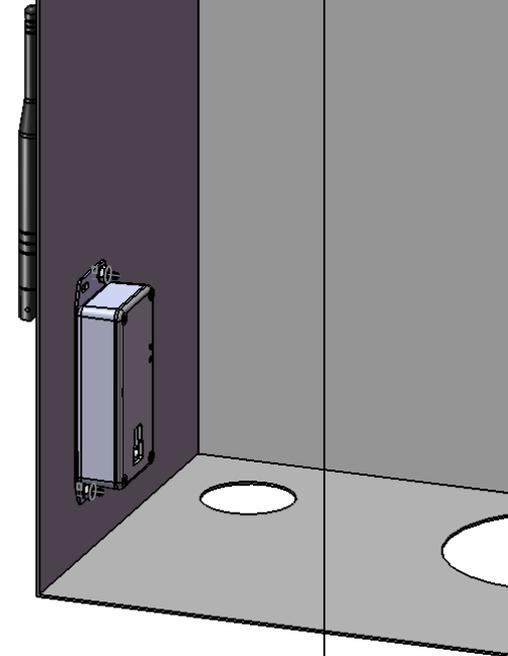
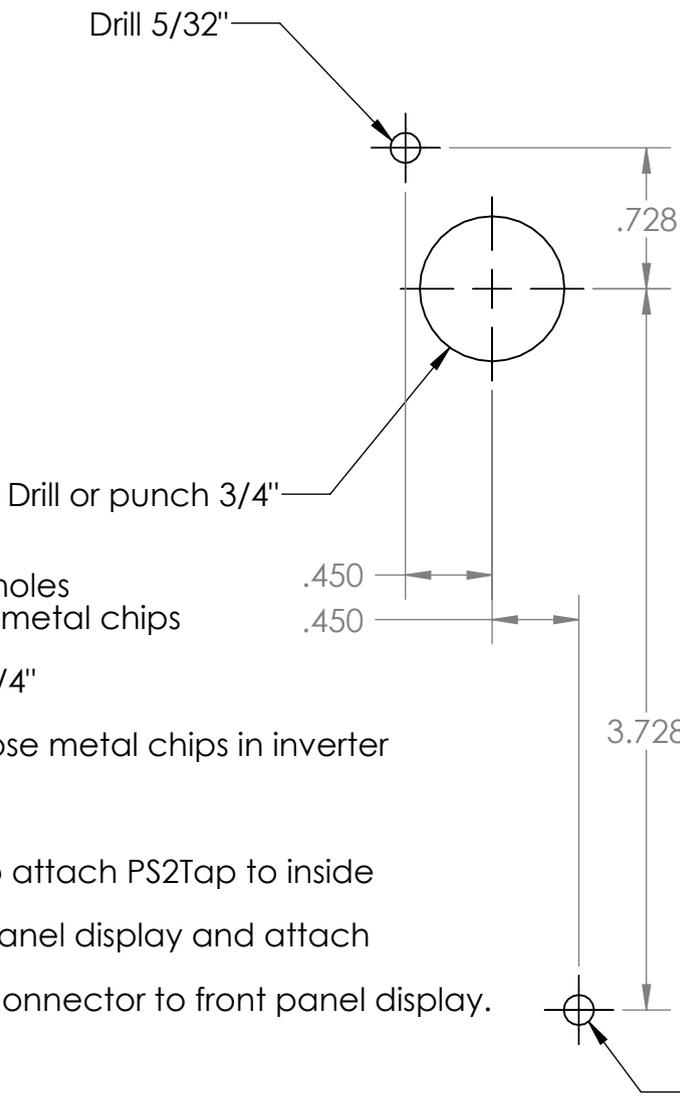


# APRS World PS2Tap Physical Installation Instructions

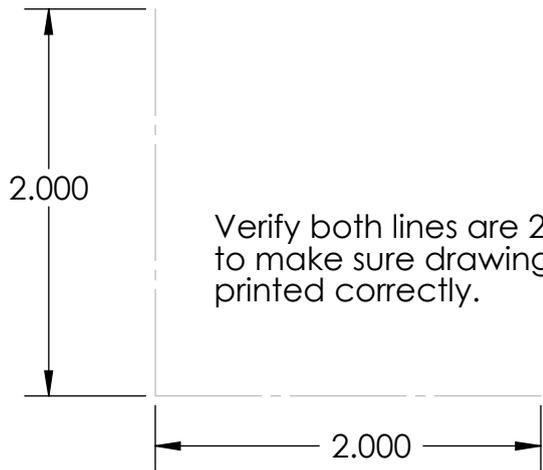

## Modification Instructions:

- 1) Use center punch to mark center of three holes
- 2) Place magnet in corner of box to trap any metal chips
- 3) Drill 5/32" holes at all three locations.
- 4) Use hole saw to enlarge antenna hole to 3/4"
- 5) Remove burrs from front and back
- 6) Carefully remove magnet and verify no loose metal chips in inverter

## Installation Instructions:

- 1) Use #6-32 machine screws and lock nuts to attach PS2Tap to inside of enclosure.
- 2) Disconnect cable from PowerSyncII front panel display and attach PS2Tap bottom connector.
- 3) Run new supplied cable from PS2Tap top connector to front panel display.
- 4) Use zip ties to secure cable.

**Align template with  
bottom, back, left of PowerSyncII**